





The availability of particular products and applications and services for these products may vary by region. Please check with your Nokia dealer for details, and availability of language options.

This device complies with Directive 2002/95/EC on the restriction of the use of certain hazardous substances in electrical and electronic equipment.

#### Export controls

This device may contain commodities, technology or software subject to export laws and regulations from the US and other countries. Diversion contrary to law is prohibited.

#### NO WARRANTY

The third-party applications provided with your device may have been created and may be owned by persons or entities not affiliated with or related to Nokia. Nokia does not own the copyrights or intellectual property rights to the third-party applications. As such, Nokia does not take any responsibility for end-user support, functionality of the applications, or the information in the applications or these materials. Nokia does not provide any warranty for the third-party applications. BY USING THE APPLICATIONS YOU ACKNOWLEDGE THAT THE APPLICATIONS ARE PROVIDED AS IS WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW. YOU FURTHER ACKNOWLEDGE THAT NEITHER NOKIA NOR ITS AFFILIATES MAKE ANY REPRESENTATIONS OR WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO WARRANTIES OF TITLE, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OR THAT THE APPLICATIONS WILL NOT INFRINGE ANY THIRD-PARTY PATENTS, COPYRIGHTS, TRADEMARKS, OR OTHER RIGHTS.

Issue 1

# Contents

For your safety .....	vi	Make a video call .....	9
General information .....	ix	Answer or reject a video call .....	10
Access codes .....	ix	Options during a video call .....	10
Security code .....	ix	Video sharing.....	10
PIN codes.....	ix	<b>4. Write text.....</b>	<b>11</b>
PUK codes.....	ix	Traditional text input.....	11
Barring password.....	ix	Predictive text input.....	11
Configuration settings service .....	ix	<b>5. Navigate the menus.....</b>	<b>12</b>
Software updates.....	ix	<b>6. Messaging .....</b>	<b>13</b>
Download content.....	x	Message .....	13
Nokia support and contact information ...	x	Creating a message.....	13
<b>1. Get started.....</b>	<b>1</b>	Text messages (SMS).....	13
Install the SIM card and battery.....	1	Multimedia messages (MMS).....	13
Insert a microSD card.....	2	Flash messages .....	14
Remove the microSD card.....	2	Write a message .....	14
Charge the battery.....	2	Receive a message.....	15
Open and close the phone .....	3	Nokia Xpress audio messaging.....	15
Switch the phone on and off .....	3	Create a message.....	15
Set the time, time zone, and date .....	3	Listen to a message.....	15
Plug and play service .....	3	Memory full .....	15
Phone strap .....	3	Folders.....	15
Antenna.....	3	E-mail application .....	15
<b>2. Your phone .....</b>	<b>4</b>	E-mail setup wizard.....	16
Keys and parts .....	4	Write and send an e-mail .....	16
Standby mode.....	5	Download e-mail .....	16
Mini display .....	5	Read and reply to e-mail.....	16
Main display .....	5	Instant messaging.....	17
Active standby mode.....	5	Voice messages .....	17
Indicators.....	5	Info messages.....	17
Flight mode .....	6	Service commands.....	17
Keypad lock (keyguard) .....	7	Delete messages.....	17
Functions without a SIM card .....	7	SIM messages.....	17
<b>3. Call functions .....</b>	<b>8</b>	Message settings.....	17
Make a voice call.....	8	General settings.....	17
Speed dialing.....	8	Text messages.....	18
Enhanced voice dialing.....	8	Multimedia messages.....	18
Answer or reject a call .....	8	E-mail messages .....	19
Call waiting.....	9	<b>7. Contacts .....</b>	<b>20</b>
Options during a voice call .....	9	Search for a contact.....	20

Save names and phone numbers.....	20	<b>10.Operator menu .....</b>	<b>32</b>
Save details .....	20	<b>11.Gallery .....</b>	<b>33</b>
Copy or move contacts .....	20	Print images.....	33
Edit contact details.....	20	Memory card .....	33
Synchronize all .....	21	Format the memory card.....	33
Delete contacts .....	21	Lock the memory card.....	34
Business cards .....	21	Check memory consumption.....	34
Settings.....	21	<b>12.Media .....</b>	<b>35</b>
Groups.....	21	Camera .....	35
Speed dialing .....	21	Take an image.....	35
<b>8. Log .....</b>	<b>22</b>	Take a self-portrait.....	35
<b>9. Settings.....</b>	<b>23</b>	Zoom .....	35
Profiles.....	23	Camera options .....	35
Themes.....	23	Camera and video options .....	35
Tones .....	23	Video .....	35
Main display.....	23	Record a video clip.....	36
Mini display.....	24	Music player .....	36
Date and time.....	24	Playing the music tracks.....	36
My shortcuts .....	24	Music player options .....	36
Left selection key .....	24	Radio.....	37
Right selection key .....	24	Save radio frequencies .....	37
Navigation key .....	24	Listen to the radio .....	37
Active standby key.....	24	Voice recorder .....	38
Voice commands .....	24	Voice recorder.....	38
Connectivity .....	25	Equalizer .....	38
Bluetooth wireless technology.....	25	<b>13.Organizer .....</b>	<b>39</b>
Set up a Bluetooth connection.....	25	Alarm clock .....	39
Packet data connection (GPRS) .....	26	Stop the alarm.....	39
Modem settings.....	26	Calendar.....	39
Data transfer .....	26	Make a calendar note.....	39
Data transfer with		Note alarm.....	39
a compatible device.....	27	To-do list .....	40
Synchronize from a compatible PC.....	27	Notes.....	40
Synchronize from a server .....	27	Calculator.....	40
USB data cable.....	27	Countdown timer .....	40
Call.....	27	Stopwatch .....	41
Phone .....	28	<b>14.Push to talk .....</b>	<b>42</b>
Configuration.....	29	PTT channels.....	42
Security.....	29	Create a channel.....	42
Digital rights management.....	30	Receive an invitation.....	43
Phone software updates.....	30	Switch PTT on and off.....	43
Restore factory settings.....	31		

Make and receive a PTT call .....	43	<b>18.PC connectivity.....</b>	<b>53</b>
Make a channel call .....	43	Nokia PC Suite .....	53
Make a one-to-one call .....	43	Packet data, HSCSD, and CSD .....	53
Make a PTT call to multiple recipients .....	44	Bluetooth.....	53
Receive a PTT call .....	44	Data communication applications.....	53
Callback requests.....	44	<b>19.Genuine Enhancements .....</b>	<b>54</b>
Send a callback request.....	44	Battery.....	54
Respond to a callback request .....	44	<b>20.Battery information .....</b>	<b>56</b>
Add a one-to-one contact.....	45	Charging and discharging.....	56
PTT settings .....	45	Nokia battery authentication guidelines .....	57
Configuration settings .....	45	<b>21.Care and maintenance .....</b>	<b>59</b>
Web.....	45	<b>22.Additional safety information.....</b>	<b>60</b>
<b>15.Applications .....</b>	<b>46</b>	<b>Index.....</b>	<b>64</b>
Launch a game .....	46		
Launch an application.....	46		
Application options.....	46		
Download an application .....	46		
<b>16.SIM services .....</b>	<b>47</b>		
<b>17.Web.....</b>	<b>48</b>		
Set up browsing .....	48		
Connect to a service .....	48		
Browse pages.....	48		
Browse with phone keys .....	48		
Direct calling .....	49		
Bookmarks .....	49		
Receive a bookmark.....	49		
Appearance settings .....	49		
Security settings .....	49		
Cookies .....	49		
Scripts over secure connection .....	50		
Download settings.....	50		
Service inbox.....	50		
Service inbox settings.....	50		
Cache memory.....	50		
Browser security .....	50		
Security module.....	51		
Certificates.....	51		
Digital signature.....	51		

# For your safety

Read these simple guidelines. Not following them may be dangerous or illegal. Read the complete user guide for further information.



## SWITCH ON SAFELY

Do not switch the device on when wireless phone use is prohibited or when it may cause interference or danger.



## ROAD SAFETY COMES FIRST

Obey all local laws. Always keep your hands free to operate the vehicle while driving. Your first consideration while driving should be road safety.



## INTERFERENCE

All wireless devices may be susceptible to interference, which could affect performance.



## SWITCH OFF IN HOSPITALS

Follow any restrictions. Switch the device off near medical equipment.



## SWITCH OFF IN AIRCRAFT

Follow any restrictions. Wireless devices can cause interference in aircraft.



## SWITCH OFF WHEN REFUELING

Do not use the device at a refueling point. Do not use near fuel or chemicals.



## SWITCH OFF NEAR BLASTING

Follow any restrictions. Do not use the device where blasting is in progress.



## USE SENSIBLY

Use only in the normal position as explained in the product documentation. Do not touch the antenna unnecessarily.



## QUALIFIED SERVICE

Only qualified personnel may install or repair this product.



## ENHANCEMENTS AND BATTERIES

Use only approved enhancements and batteries. Do not connect incompatible products.



## WATER-RESISTANCE

Your device is not water-resistant. Keep it dry.



## BACK-UP COPIES

Remember to make back-up copies or keep a written record of all important information stored in your device.



## CONNECTING TO OTHER DEVICES

When connecting to any other device, read its user guide for detailed safety instructions. Do not connect incompatible products.



## EMERGENCY CALLS

Ensure the phone function of the device is switched on and in service. Press the end key as many times as needed to clear the display and return to the standby mode. Enter the emergency number, then press the call key. Give your location. Do not end the call until given permission to do so.

## ■ About your device

The wireless device described in this guide is approved for use on the WCDMA 850 and 2100, EGSM 850 and 900, and GSM 1800 and 1900 network. Contact your service provider for more information about networks.

When using the features in this device, obey all laws and respect local customs, privacy and legitimate rights of others, including copyrights.

Copyright protections may prevent some images, music (including ringing tones), and other content from being copied, modified, transferred, or forwarded.



**Warning:** To use any features in this device, other than the alarm clock, the device must be switched on. Do not switch the device on when wireless device use may cause interference or danger.

## ■ Network services

To use the phone you must have service from a wireless service provider. Many of the features require special network features. These features are not available on all networks; other networks may require that you make specific arrangements with your service provider before you can use the network services. Your service provider can give you instructions and explain what charges will apply. Some networks may have limitations that affect how you can use network services. For instance, some networks may not support all language-dependent characters and services.

Your service provider may have requested that certain features be disabled or not activated in your device. If so, these features will not appear on your device menu. Your device may also have a special configuration such as changes in menu names, menu order, and icons. Contact your service provider for more information.

This device supports WAP 2.0 protocols (HTTP and SSL) that run on TCP/IP protocols. Some features of this device, such as multimedia messaging (MMS), browsing, e-mail application, instant messaging, presence enhanced contacts, remote synchronization, and content downloading using the browser or MMS, require network support for these technologies.

## ■ Shared memory

The following features in this device may share memory: gallery, contacts, text messages, multimedia messages, and instant messaging, e-mail, calendar, to-do notes, Java™ games and application, and note application. Use of one or more of these features may reduce the memory available for the remaining features sharing memory. Your device may display a message that the memory is full when you try to use a shared memory feature. In this case, delete some of the information or entries stored in the shared memory features before continuing.

## ■ Enhancements

A few practical rules about accessories and enhancements:

- Keep all accessories and enhancements out of the reach of small children.
- When you disconnect the power cord of any accessory or enhancement, grasp and pull the plug, not the cord.
- Check regularly that enhancements installed in a vehicle are mounted and are operating properly.
- Installation of any complex car enhancements must be made by qualified personnel only.

# General information

## ■ Access codes

### Security code

The security code (5 to 10 digits) helps to protect your phone against unauthorized use. To change the code, and to set the phone to request the code, see ["Security"](#), on page 29.

### PIN codes

The personal identification number (PIN) code and the universal personal identification number (UPIN) code (4 to 8 digits) help to protect your SIM card against unauthorized use. See ["Security"](#), on page 29.

The PIN2 code (4 to 8 digits) may be supplied with the SIM card and is required for some functions.

The module PIN is required to access the information in the security module. See ["Security module"](#), on page 51.

The signing PIN is required for the digital signature. See ["Digital signature"](#), on page 51.

### PUK codes

The personal unblocking key (PUK) code and the universal personal unblocking key (UPUK) code (8 digits) are required to change a blocked PIN code and UPIN code, respectively. The PUK2 code (8 digits) is required to change a blocked PIN2 code. If the codes are not supplied with the SIM card, contact your local service provider for the codes.

## Barring password

The barring password (4 digits) is required when using the call barring service. See ["Security"](#), on page 29.

## ■ Configuration settings service

To use some of the network services, such as mobile internet services, MMS, Nokia Xpress audio messaging, or remote internet server synchronization, your phone needs the correct configuration settings. For more information on availability, contact your network operator, service provider, nearest authorized Nokia dealer, or visit the support area on the Nokia website, [www.nokia-asia.com/6267/support](http://www.nokia-asia.com/6267/support).

When you have received the settings as a configuration message, and the settings are not automatically saved and activated, *Configuration settings received* is displayed.

To save the settings, select **Show** > **Save**. If required, enter the PIN code supplied by the service provider.

To discard the received settings, select **Exit** or **Show** > **Discard**.

## ■ Software updates

Nokia may produce software updates that may offer new features, enhanced functions, or improved performance. You may be able to request these updates through the Nokia Software Updater PC application. To update the device software, you need the Nokia Software Updater application and a compatible PC with Microsoft Windows

2000 or XP operating system, broadband internet access, and a compatible data cable to connect your device to the PC.

To get more information and to download the Nokia Software Updater application, visit [www.nokia.com/softwareupdate](http://www.nokia.com/softwareupdate) or your local Nokia website.

If software updates over the air are supported by your network, you may also be able to request updates through the device. See "Phone", on page 28, *Phone updates*.

Downloading software updates may involve the transmission of large amounts of data through your service provider's network. Contact your service provider for information about data transmission charges.

Make sure that the device battery has enough power, or connect the charger before starting the update.



**Important:** Use only services that you trust and that offer adequate security and protection against harmful software.

## ■ Download content

You may be able to download new content (for example, themes) to the phone (network service).

For the availability of different services, pricing, and tariffs, contact your service provider.



**Important:** Use only services that you trust and that offer adequate security and protection against harmful software.

## ■ Nokia support and contact information

For the latest version of this guide, downloads, services and additional information related to your Nokia product, please visit [www.nokia-asia.com/6267/support](http://www.nokia-asia.com/6267/support) or your local Nokia web site. You may also download free configuration settings such as MMS, GPRS, e-mail, and other services for your phone model at [www.nokia-asia.com/phonesettings](http://www.nokia-asia.com/phonesettings).

Should you still require assistance, please refer to [www.nokia-asia.com/contactus](http://www.nokia-asia.com/contactus).

To check for the nearest Nokia care center location for maintenance services, you may like to visit [www.nokia-asia.com/repair](http://www.nokia-asia.com/repair).

# 1. Get started

## ■ Install the SIM card and battery

 
Always switch the device off and disconnect the charger before removing the battery.

For availability and information on using SIM card services, contact your SIM card vendor. This may be the service provider or other vendor.

This device is intended for use with a BL-5C battery. Always use original Nokia batteries. See "[Nokia battery authentication guidelines](#)", on page 57.

The SIM card and its contacts can easily be damaged by scratches or bending, so be careful when handling, inserting, or removing the card.


1. With the back of the phone facing you, slide the back cover to remove it from the phone.

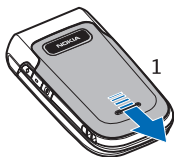


2. To remove the battery, lift it as shown.



 3. To release the SIM card holder, gently pull the locking clip of the card holder, and open it.

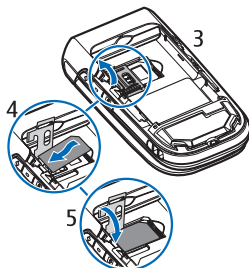

 4. Insert the SIM card into the SIM card holder. Make sure that the SIM card is properly inserted and that the golden contact area on the card is facing downwards.
5. Close the SIM card holder, and press it until it snaps into position.
6. Replace the battery.

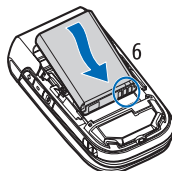


7. Slide the back cover into place.



## ■ Insert a microSD card



 1. Open the memory card holder as shown.

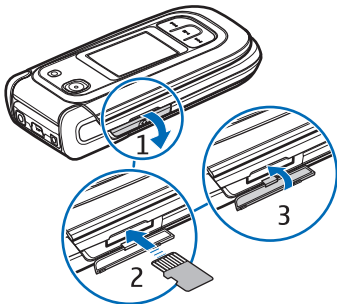

2. Insert the card into the microSD card slot with the gold-colored contact area on the card facing upwards, and press it until it clicks into place.
3. Close the memory card holder.

Memory card is not included in sales pack.



**Important:** Do not remove the memory card in the middle of an operation when the card is being accessed. Removing the card in the middle of an operation may damage the memory card as well as the device, and data stored on the card may be corrupted.

## ■ Remove the microSD card

You can remove or replace the microSD card during phone operation without switching the phone off.

1. Make sure that no application is currently accessing the microSD memory card.
2. Open the memory card holder.

3. Press the microSD card slightly in to release the locking.
4. Remove the microSD card from the slot.

## ■ Charge the battery

 
Check the model number of any charger before use with this device. This device is intended for use when supplied with power from an AC-3, AC-4, AC-5 or CA-70 charger.



**Warning:** Use only batteries, chargers, and enhancements approved by Nokia for use with this particular model. The use of any other types may invalidate any approval or warranty, and may be dangerous.

For availability of approved enhancements, please check with your dealer. When you disconnect the power cord of any enhancement, grasp and pull the plug, not the cord.

1. Connect the charger to a wall socket.

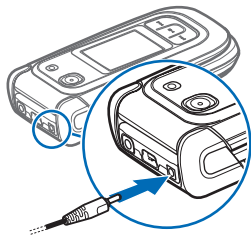

2. Connect the lead from the charger to the charger connector as shown. A CA-44 charger adapter can be used with older charger models.

If the battery is completely discharged, it may take a few minutes before the charging indicator appears on the display or before any calls can be made.


The charging time depends on the charger used. Charging a BL-5C battery with the AC-4 charger takes approximately 1 hour and 30 minutes while the phone is in the standby mode.

## ■ Open and close the phone

 You open and close the phone manually. When you open the fold of the phone, it opens up to approximately 165 degrees. Do not try to force the fold open more. Depending on the theme, a tone sounds when you open and close the phone.

## ■ Switch the phone on and off

Press and hold the end key until the phone turns on or off.

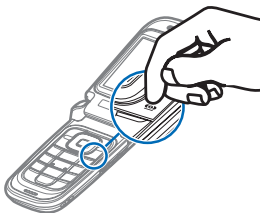

If the phone asks for a PIN or a UPIN code, enter the code (displayed as \*\*\*\*), and select **OK**.

## Set the time, time zone, and date

 
Enter the local time, select the time zone of your location in terms of the time difference with respect to Greenwich Mean Time (GMT), and enter the date. See "[Date and time](#)", on page 24.

## Plug and play service

When you switch on your phone for the first time, and the phone is in the standby mode, you are asked to get the configuration settings from your service provider (network service). Confirm or decline the query. See "[Configuration settings service](#)", on page ix.

## ■ Phone strap

Remove the back cover of the phone. Insert a strap as shown in the picture. Replace the back cover.

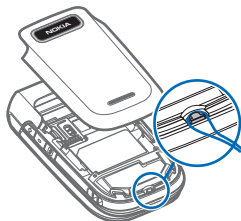

## ■ Antenna

Your device has an internal antenna.

 


**Note:** As with any radio transmitting device, avoid touching an antenna unnecessarily when the antenna is in use. For example, avoid touching the cellular antenna during a phone call. Contact with a transmitting or receiving antenna affects the quality of the radio communication, may cause the device to operate at a higher power level than otherwise needed, and may reduce the battery life.




## 2. Your phone


### ■ Keys and parts

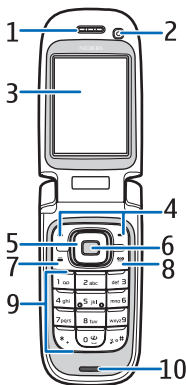

- 1 Earpiece
- 2 CIF camera
- 3 Main display
- 4 Left and right selection keys
- 5 Navi™ scroll key;  
herein referred to as scroll key
- 6 Middle selection key
- 7 Call key
- 8 End key;  
ends calls (short key press) and turns  
phone on and off (long key press)
- 9 Keypad
- 10 Close bumper
- 11 Mini display
- 12 Music key;  
rewinds current track (press and hold) or  
skips to previous track (short key press)
- 13 Music key play/pause
- 14 Loudspeaker

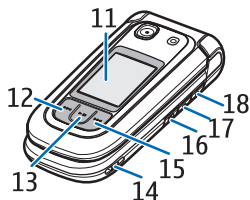 

 - 15 Music key;  
fast forwards current track (press and  
hold) or skip to next track (short key  
press)
- 16 Camera key
- 17 Volume down key
- 18 Volume up key/PTT key
- 19 Camera flash

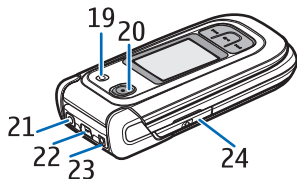

- 20 2-megapixel camera
- 21 Headset connector
- 22 USB port
- 23 Charger connector
- 24 Memory card slot




**Warning:** The scroll key and the middle selection key (6) in this device may contain nickel. The scroll key and the middle selection key are not designed for prolonged contact with the skin. Continuous exposure to nickel on the skin may lead to a nickel allergy.

## ■ Standby mode

 
When the phone is ready for use, and you have not entered any characters, the phone is in the standby mode.

### Mini display

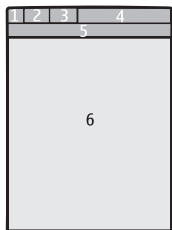

- 1 Network mode indicator
- 2 Signal strength of the cellular network
- 3 Battery charge status
- 4 Indicators
- 5 Network name or the operator logo
- 6 Clock and date

### Main display

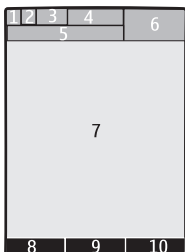 

- 1 Network mode indicator
- 2 Signal strength of the cellular network
- 3 Battery charge status
- 4 Indicators
- 5 Network name or the operator logo

- 6 Clock
- 7 Main display
- 8 Left selection key;  
**Go to** or a shortcut to another function.  
See "Left selection key", on page 24.
- 9 Middle selection key; **Menu**.
- 10 Right selection key;  
**Names** or a shortcut to a function that you selected. See "Right selection key", on page 24.

### Active standby mode

To enable or disable the active standby mode, select **Menu** > **Settings** > **Main display** > **Active standby** > **Active standby mode** > **On** or **Off**.




To access active standby applications, first scroll up, and then scroll to the application, and select **Select** or **View**. To select an application or event, scroll to it and press the scroll key.



To end the active standby navigation mode select **Exit**.


To switch the active standby mode off, select **Options** > **Active standby sett.** > **Active standby mode** > **Off**.

To organize and change the active standby mode, activate the navigation mode, and select **Options** > **Personalise view** or **Active standby sett.**


### Indicators


-  You have unread messages.
-  You have unsent, canceled, or failed messages.
-  The phone registered a missed call.


 ,  Your phone is connected to the instant messaging service, and the availability status is online or offline.


 You received one or several instant messages.

 The keypad is locked.



 The phone does not ring for an incoming call or text message.



 The alarm clock is activated.


 The countdown timer is running.



 The stopwatch is running.

**G** , **E** The phone is registered to the GPRS or EGPRS network.


 ,  A GPRS or EGPRS connection is established.


 ,  The GPRS or EGPRS connection is suspended (on hold).

 
 A Bluetooth connection is active.


 ,  A push to talk connection is active or suspended.




 
**2** If you have two phone lines, the second phone line is selected.

 All incoming calls are diverted to another number.

 The loudspeaker is activated, or the music stand is connected to the phone.


 Calls are limited to a closed user group.

 The timed profile is selected.

 ,  ,  , or 

A headset, handsfree, loopset, or music stand enhancement is connected to the phone.

## ■ Flight mode

You can deactivate all radio frequency functions and still have access to offline games, the calendar, and phone numbers. Use the flight mode in radio sensitive environments—on board aircraft or in hospitals. When the flight mode is active,  is shown.

Select **Menu** > **Settings** > **Profiles** > **Flight** > **Activate** or **Personalise**.

To deactivate the flight mode, select any other profile.

In the flight mode you can make an emergency call. Enter the emergency number, press the call key, and select **Yes** when asked **Exit flight profile?** The phone attempts to make an emergency call.

When the emergency call ends, the phone automatically changes to the general profile mode.



**Warning:** With the flight profile you cannot make or receive any calls, including emergency calls, or use other features that require network coverage. To make calls, you must first activate the phone function by changing profiles. If the device has been locked, enter the lock code. If you need to make an emergency call while the device is locked and in the flight profile, you may be also able to enter an official emergency number programmed in your device in the lock code field and select 'Call'. The device will confirm that you are about to exit flight profile to start an emergency call.

## ■ Keypad lock (keyguard)

Select **Menu** or **Unlock** and press \* within 1.5 seconds to lock or unlock the keypad.

If the security keyguard is activated, enter the security code if requested.

To answer a call when the keyguard is on, press the call key or open the phone. When you end or reject the call, the keypad automatically locks.

For *Security keyguard*, see "**Phone**", on page 28.

When the keyguard is on, calls may be possible to the official emergency number programmed into your device.

## ■ Functions without a SIM card

Several functions of your phone may be used without installing a SIM card (for example, data transfer with a compatible PC or other compatible device). Some functions appear dimmed in the menus and cannot be used.

## 3. Call functions

### ■ Make a voice call

1. Enter the phone number, including the area code.  
For international calls, press \* twice for the international prefix (the + character replaces the international access code), enter the country code, the area code without the leading 0, if necessary, and the phone number.
2. To call the number, press the call key.  
To increase or decrease the volume during a call, press the volume keys.
3. To end the call or to cancel the call attempt, press the end key, or close the phone.

To search for a name or phone number that you saved in *Contacts*, see "[Search for a contact](#)", on page 20. Press the call key to call the number.

To access the list of dialed numbers, press the call key once in the standby mode. To call a number, select a number or name, and press the call key.

### Speed dialing

Assign a phone number to one of the speed-dialing keys, 3 to 9. See "[Speed dialing](#)", on page 21. Call the number in either of the following ways:

- Press a speed-dialing key, then the call key.
- If *Speed dialling* is set to *On*, press and hold a speed-dialing key until the call begins. See *Speed dialling* in "[Call](#)", on page 27.

### Enhanced voice dialing

You can make a phone call by saying the name that is saved in the contact list of the phone. Voice commands are language-dependent. To set the language, see *Recognition lang.* in "[Phone](#)", on page 28.



**Note:** Using voice tags may be difficult in a noisy environment or during an emergency, so you should not rely solely upon voice dialing in all circumstances.

1. In the standby mode, press and hold the right selection key or press and hold the volume down key. A short tone is played, and *Speak now* is displayed.

2. Say the voice command clearly. If the voice recognition was successful, a list with matches is shown. The phone plays the voice command of the match on the top of the list. If the result is not the correct one, scroll to another entry.

Using voice commands to carry out a selected phone function is similar to voice dialing. See *Voice commands* in "[My shortcuts](#)", on page 24.

### ■ Answer or reject a call

To answer an incoming call, press the call key, or open the phone.

To end the call, press the end key or close the phone.

To reject an incoming call, press the end key or close the phone.

To reject an incoming call when the phone is closed, press and hold a volume key.

























































































































